

Starting the Fireplace During a Power Outage
(IPI - Intellifire ignition system Only - no pilot light)
Print These Instructions

With A Remote Control:

- Remove the screen only and set aside. Do not remove the glass.
- Turn off all power to the fireplace - wall switch "OFF"
- Locate the Transformer box on the right side under the firebox
- Unplug the Transformer (should be able to read the word transformer when you remove the plug). There is also a fan plug if you have a fan. No need to disconnect that plug.
- If you have a fan, turn the fan "OFF"
- Insert two new "D" cell batteries into the battery holder under the firebox
- Turn the wall switch "ON"
- Locate the remote control receiver box under the firebox
- Set the remote control receiver to "ON." Fireplace should ignite.
- Put the screen back on for safety.

Without a Remote Control:

- Remove the screen only and set aside. Do not remove the glass.
- Turn off all power to the fireplace - wall switch "OFF"
- Locate the Transformer box on the right side under the firebox
- Unplug the transformer (should be able to read the word transformer when you remove the plug). There is also a fan plug if you have a fan. No need to disconnect that plug.
- If you have a fan, turn the fan switch under the fire box to "OFF." Listen for the click.
- Insert two new "D" cell batteries into the battery holder under the firebox
- Turn the wall switch "ON." Fireplace should ignite.
- Put the screen back on for safety

***NOTE: Use only fresh quality brand batteries such as Duracell or Kodak Xtralife Alkaline batteries. "Knock off" brands may not start your fireplace. If you used a "knock off" brand or used batteries and the fireplace did not ignite, turn off the power to the fireplace and replace the batteries with new quality brand batteries. Try again.**

When The Electrical Power is Restored turn off the fireplace. Let the firebox cool. Remove the screen, set aside. Remove the batteries - **DO NOT STORE THE BATTERIES IN THE BATTERY HOLDER OR ANYWHERE UNDER THE FIREPLACE BOX.** Plug in the transformer plug. If you have a fan switch, turn on the fan and adjust the speed. If you have a remote, set the remote receiver to "AUTO." Put the screen back on. Test the fireplace. If the fireplace does not ignite; turn off all power to the fireplace and check to make sure you put everything back the way it was before you lost power. If it still doesn't ignite, call your service company.